

that you can get to printing again. **The following reset instructions are good for these printer models: Brother DCP-L2550DW, Brother HL-2390dw, Brother MFC-L2710dw**

Make sure your printer is on

1. Open front cover of printer (to reveal the cartridge mechanism) and "Front Door Open" will flash on the display.
2. Next, press STOP/EXIT and CLEAR at the SAME TIME (one quick press)
3. Immediately after, press CLEAR once again.
4. A menu called RESET MENU will appear.
5. Arrow down to find your toner type
TNR-STD - use this selection if your toner is standard yield tn-730
TNR-HC - use this selection if your toner is high yield tn-760
6. Once you select the type of toner, PRESS OK
7. Press the UP Arrow to confirm reset
8. The Display should say "Accepted"
9. Close the front cover

Your printer should be ready to print!

To order your toner tn-760 or drum dr-730, call us at 760-431-3756 or shop on line.

Reset Drum for Brother MFC-L2710DW

1. Make sure the machine is turned on.
2. Close the front cover.
3. Press OK and the Up arrow key at the same time.
4. Press OK to select Drum.
5. Press the Up arrow key to reset the drum counter.

Apr 3, 2019