

How to reset Printer Brother 2200 Series



Laser Toners and Drums can be used as long as the printed paper doesn't have clear and /or dark spots. Shaking the toner two three times at the end of its life, and when the printing starts fading, helps to prolong it's use for a while, BUT if the printer suddenly stops working and you see an orange light next to toner and /or a red error red light, that's most likely due to the printer's internal page counter reaching its programmed number of 1500 pages.

At first, normally a yellow toner light starts flashing for some days, warning that the counting is about to finish.

When you see those lights try this:

1. Open the front cover and leave open while completing the following steps
2. Turn the printer off
3. Hold the 'go' button while turning the printer on. All lights should be on
4. Release the 'go' button (or "start' button)
5. Press the 'go' button (or "start' button) 2 times
6. Pause. All panel lights should be on
7. Press the 'go' button (or "start' button) 6 times
8. The toner light should be off. (Error may be flashing)
9. The paper light should be on or flashing
10. Close cover. The ready light should be the only light on
11. Turn the printer off and then back on
Printer should work now

Drums also have a page counting but is much higher: 12000 pages.

The procedure for drums is much easier.

1. Leave the printer on
2. Open the front cover
3. Push and hold the go Button until all lights turn on